


Wireless strobe siren

User Guide

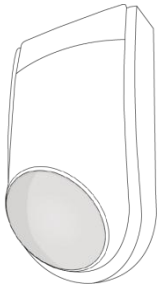

Welcome

This strobe siren is a wireless siren with the sound volume up to 110dB, and it is furnished with bright LEDs. It is connected to the alarm hub via eV1527 protocol, with an effective communication range of up to 100 meters without obstacles. If the electrical power is lost, the backup battery built-in the siren provides power operation up to 3 hours.

In The Box


Strobe Siren x1
Power Adapter x1
Mounting Screws x2
User Guide x1

Specifications

Power Supply: +12VDC, 1000mA
Backup Battery: 3.7V, 500mAh Lithium Battery
Consumption: <150mA@normal
Alarm Volume: 110dB@powered by 12VDC
Radio Frequency: 433Mhz
Operation Temperature: -10~55°C

At a Glance

Hub

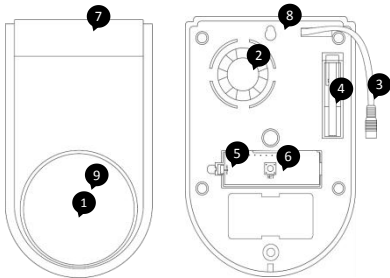

1. Strobe (Red)
2. Siren
3. Power port (+12VDC)
4. Tamper switch
5. Battery on/off switch
6. Configuration button
7. Front cover
8. Backplate
9. Indicator (Blue)

Strobe (Red)

What you see	What it means
Blinking	Alarming (150 FPM)
Solid	Pairing/Sniffer mode

How to connect to alarm hub

STEP 1. click *configuration button* **three times** on your siren, then the siren goes into the pairing/sniffer mode with light on and ready to connect to alarm hub.

STEP 2. Trigger your alarm hub an alarm to send a transmission signal to the siren, then the siren gives a long beep of successful indication.

How to disconnect with alarm hub

Click *configuration buttons* **more than 10 times** until the siren lights on , then the siren restarts. The factory reset is now completed.